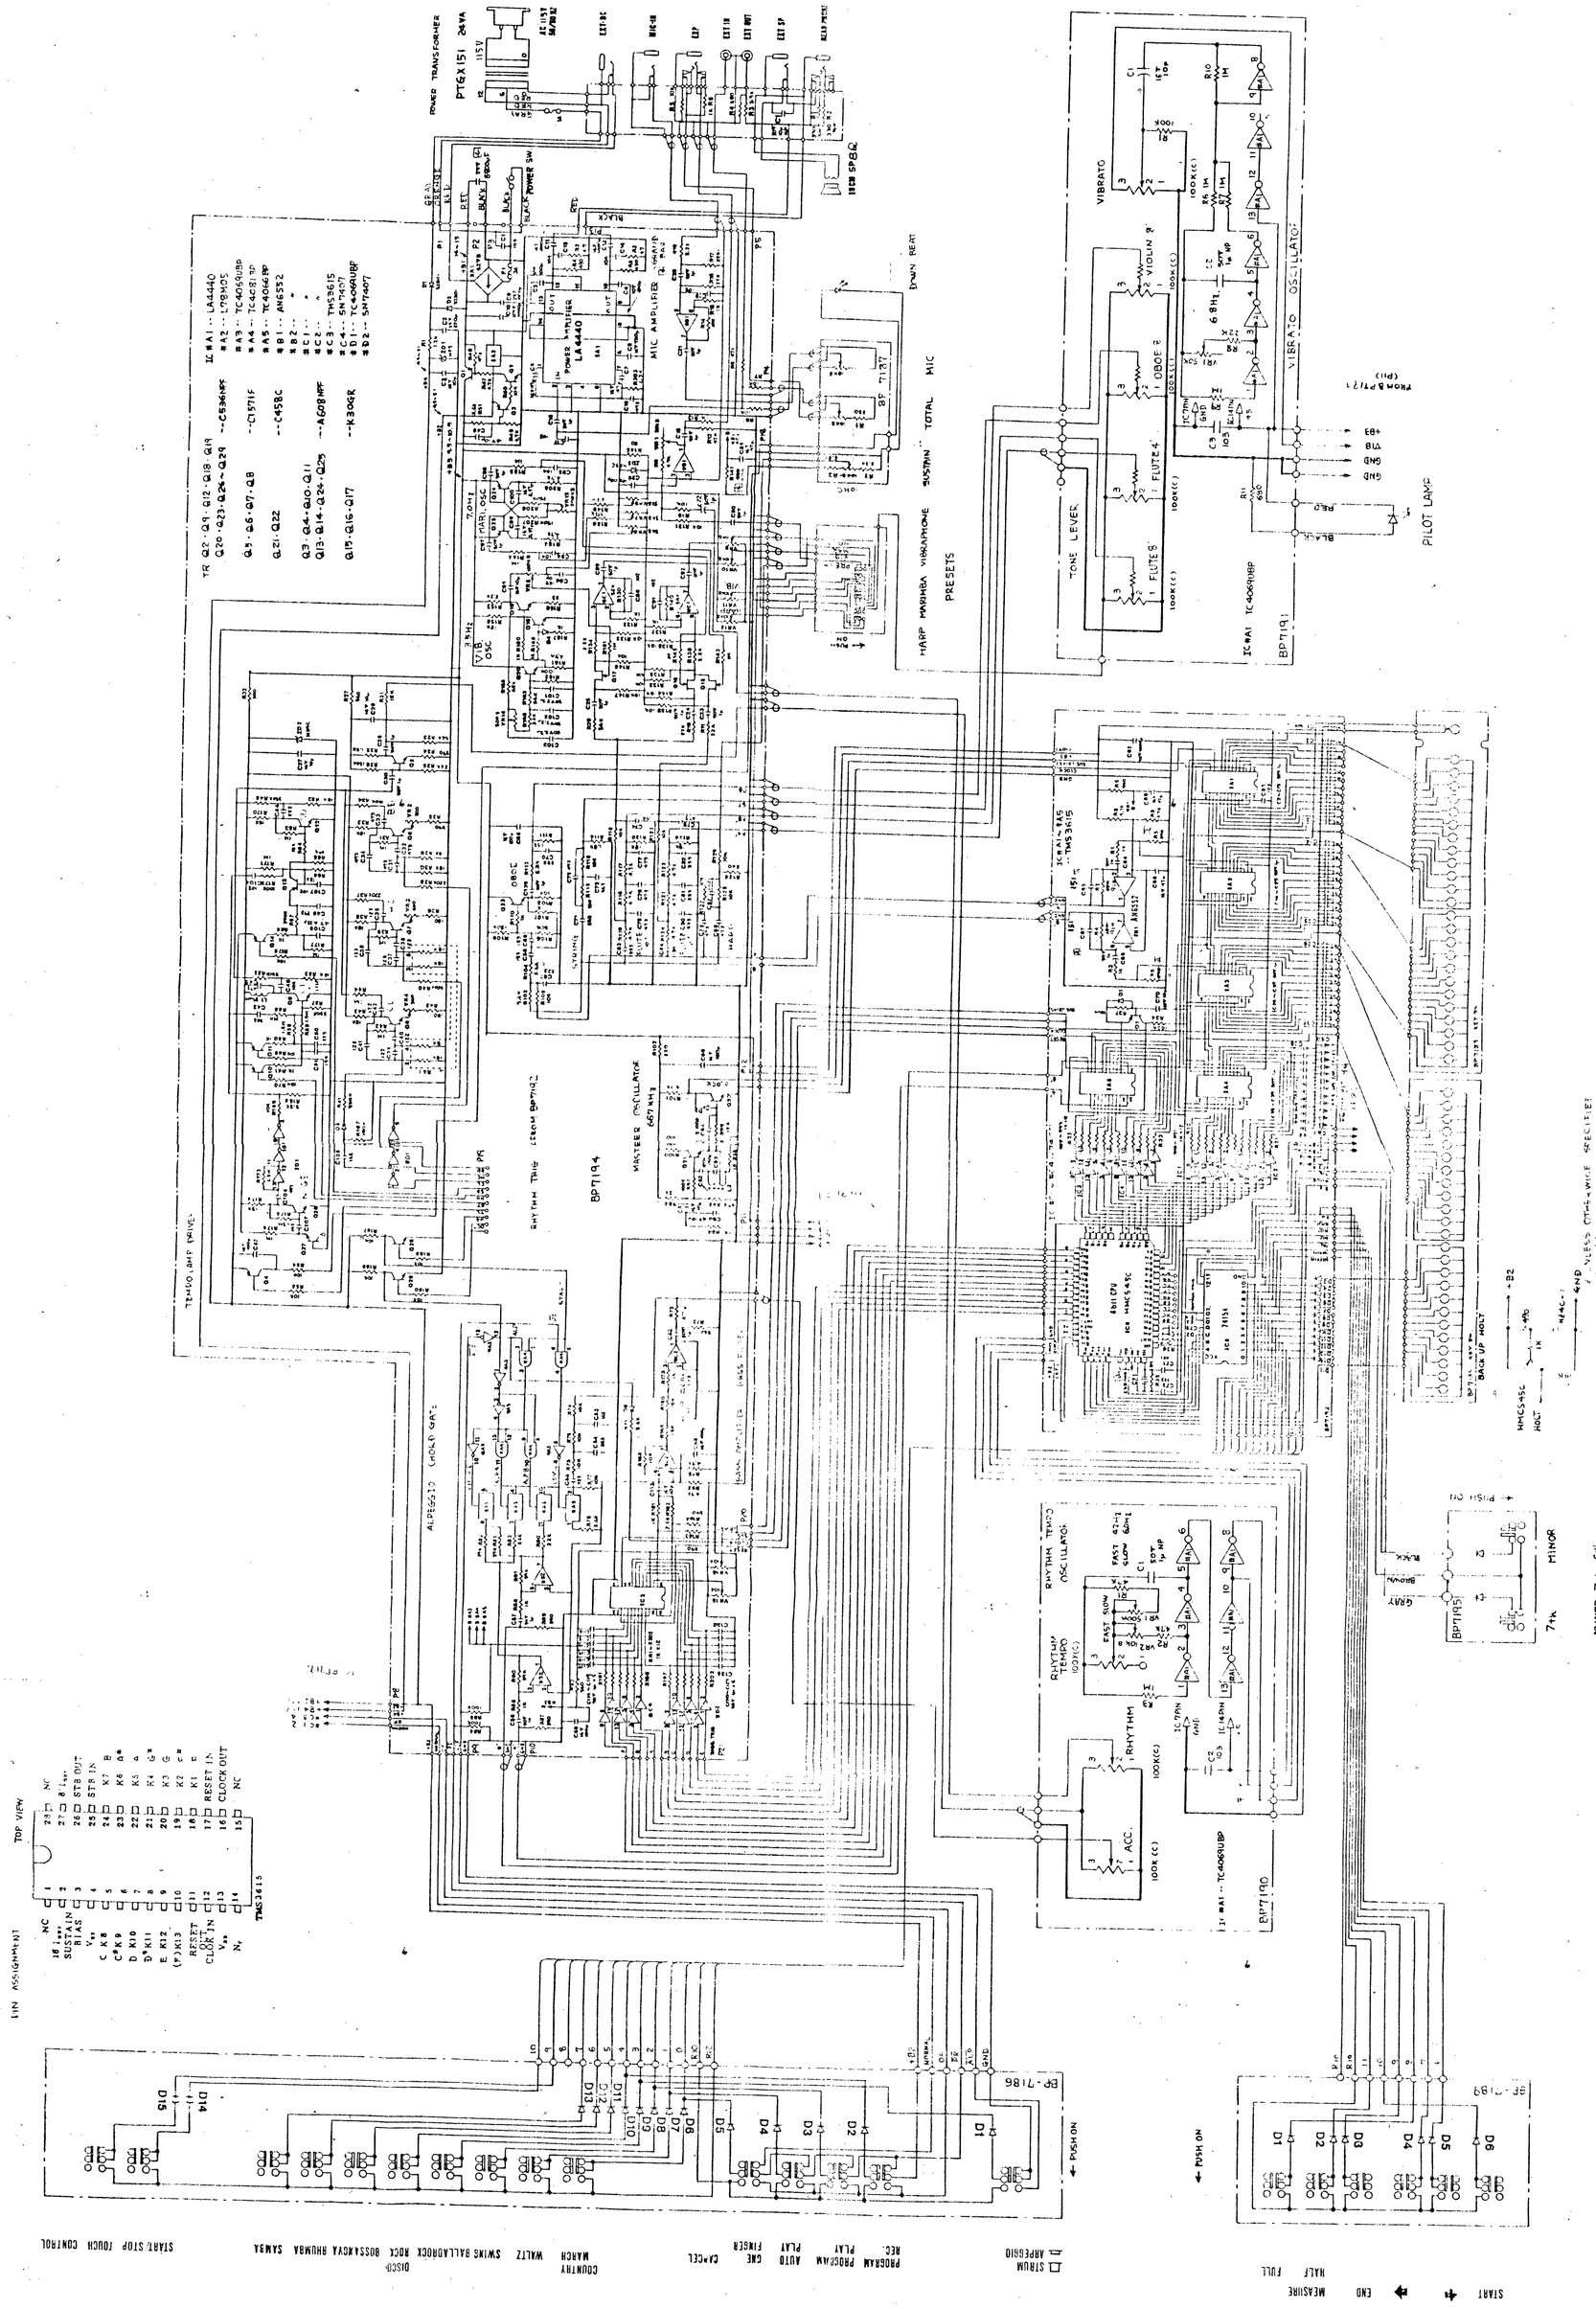

TR Q2 - Q9 , Q12 - Q18 , Q19
Q20 - Q23 , Q26 - Q29 --C536HF
Q1 - Q6 , Q7 - Q8 --C1571F
Q21 , Q22 --C458C
Q3 , Q4 - Q10 , Q11
Q13 , Q14 - Q24 , Q25 --A608HF
Q15 , Q16 , Q17 --K304GR
IC MA1 -- LA4440
#A2 -- L78M05
#A3 -- TC4069UBP
#A4 -- TC4081BP
#A5 -- TC4066BP
#B1 -- AN6552
#B2 -- "
#C1 -- "
#C2 -- "
#C3 -- TMS3615
#C4 -- SN76477
#D1 -- TC4069UBP
#D2 -- SN76477
POWER TRANSFORMER PT6A151 24VA 115V
POWER SW
MIC AMPLIFIER
POWER AMPLIFIER LA4440
MARP MARIMBA VIBRAPHONE SUSTAIN TOTAL MIC
PRESETS
DOWN BEAT
VIBRATO
TONE LEVER
VIBRATO OSCILLATOR
PILOT LAMP
RHYTHM TEMPO OSCILLATOR
RHYTHM
ACC.
MASTER OSCILLATOR 6.07 MHz
TEMPO AMP DRIVE
ALPS6610 CHORD GATE
BASS ANALYSIS
4bit CPU
BACK UP HOLD
HOLD
MINOR 7th SW.
PUSH ON
START
END
MEASURE
HALF
FULL
STRUM
ARPEGGIO
PROGRAM REC.
PROGRAM PLAY
AUTO PLAY
CHORD FINGER
CHORD
COUNTRY
MARCH
WALTZ
DISCO
SWING
BALLADROCK
ROCK
BOSSANOVA
RHUMBA
SAMBA
START/STOP TOUCH CONTROL
PIN ASSIGNMENT
TOP VIEW
TMS3615
NC
16 Foot
SUSTAIN
BIAS
Vcc
C K8
C# K9
D K10
D# K11
E K12
F K13
RESET
CLOCK IN
Vss
Vr
NC
8 Foot
STB OUT
STB IN
K7 B
K6 A#
K5 A
K4 G#
K3 G
K2 F#
K1 E
RESET IN
CLOCK OUT
NC